



Manuale d' istruzioni

Owner's Guide

Manuel d'instructions

Bedienungsanleitung

Instrucciones para el uso

Manual de instruções

Gebruiksaanwijzing

Инструкция по применению

Návod k použití

Manual de instrucțiuni

Käyttöohjeet

Brugsanvisning

ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ

Instukcja obsługi

Kullanma kılavuzu

用戶指南

Vera
BUGATTI®

BUGATTI®

Vita
Una vera
Vediva
Vola

BUGATTI®

Vera
bollitore/
kettle/bouilloire/
Wasserkocher



Vita
spremiagrumi/juicer/
presse-agrumes/
Saftpresse



Uma
bilancia/
scales/balance/
Küchenwaage

 
 
 
 
Vela
frullatore/
blender/mixer






Volo
toastapane/toaster/
grille-pain

diVa
macchina per il caffè/coffee
machine/machine à café/
Espressomaschine



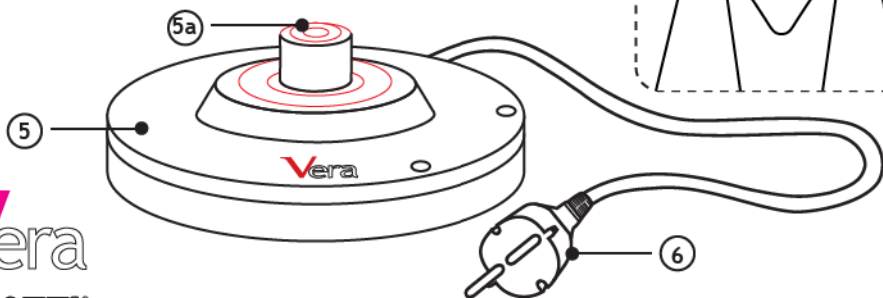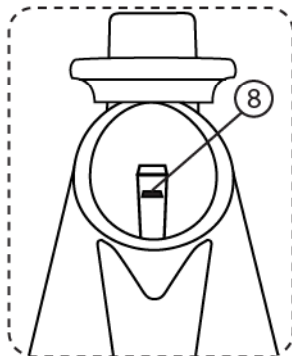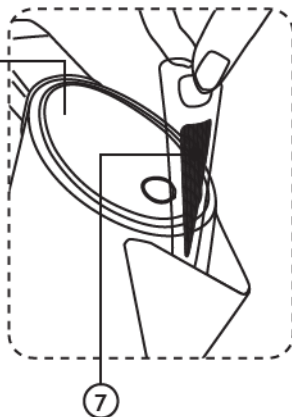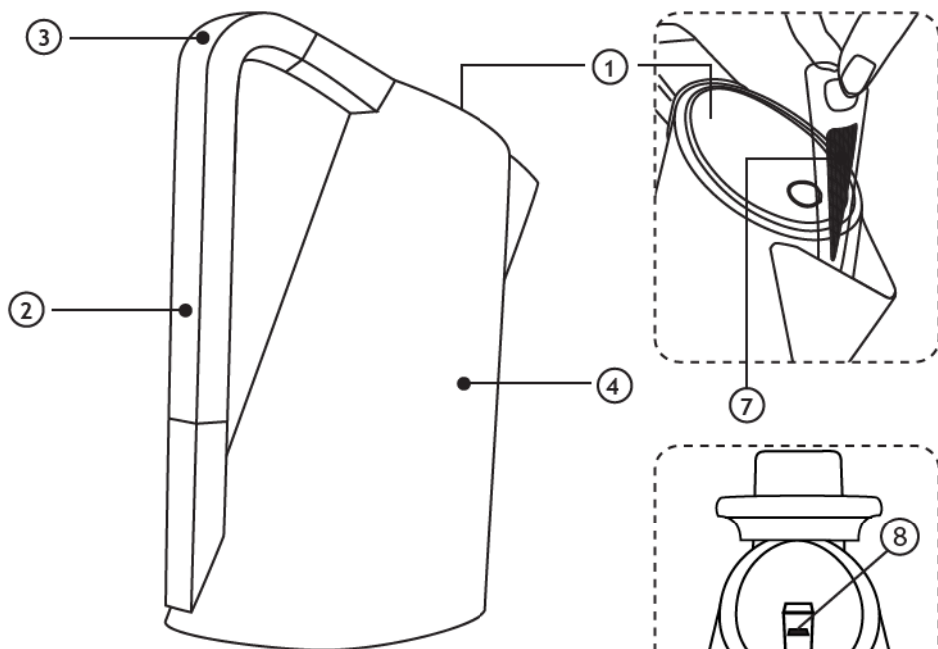

Vera
BUGATTI®

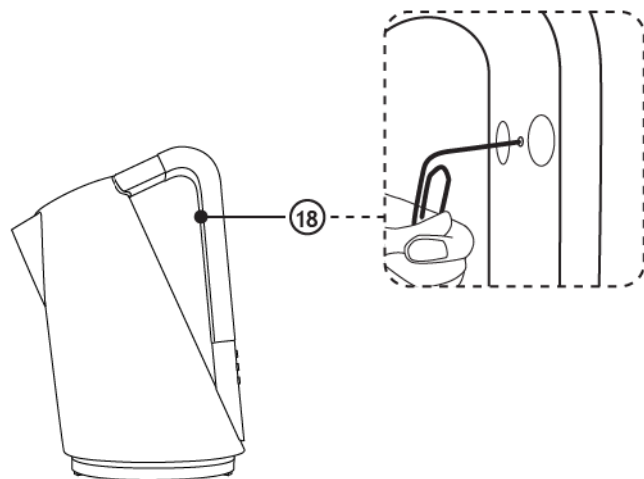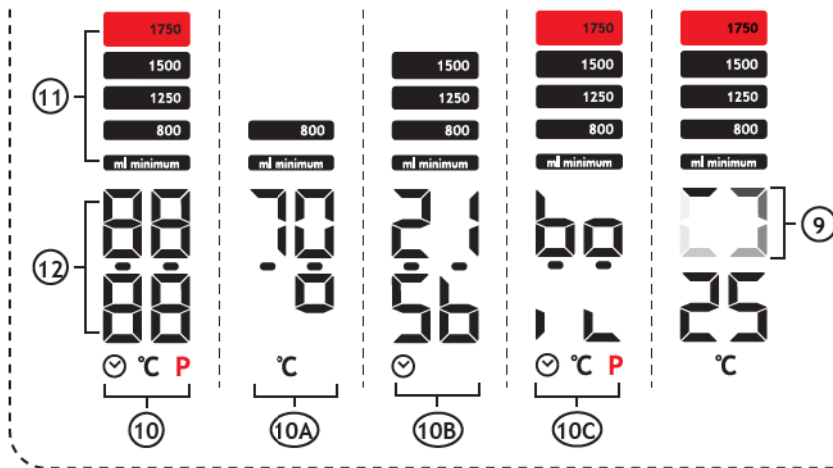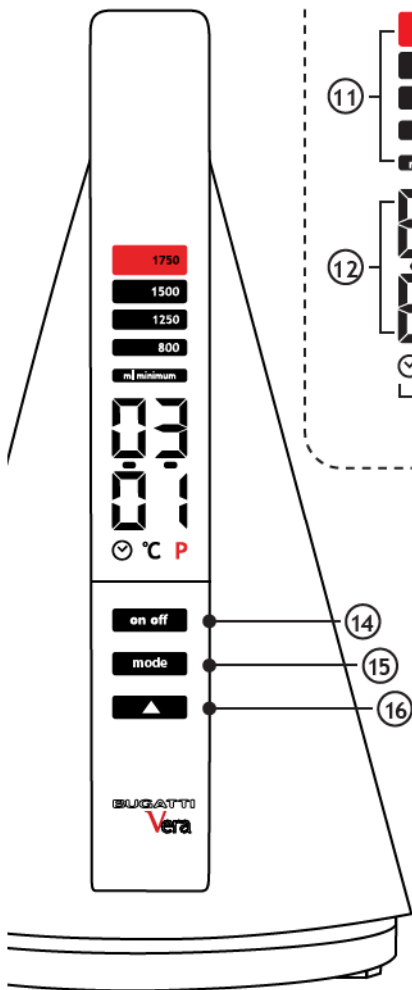   

IMPORTANT NOTICES

Dear Customer, thank you for choosing Vera, the electronic kettle from Casa Bugatti. Like any domestic appliance, this kettle must be used with care and attention to prevent people getting burnt and the kettle getting damaged.

BEFORE USING THE KETTLE FOR THE FIRST TIME, READ ALL THE INSTRUCTIONS ON INSTALLATION, USE AND MAINTENANCE AND THE SAFETY INSTRUCTIONS CAREFULLY. DO NOT USE THE KETTLE UNLESS YOU ARE THOROUGHLY FAMILIAR WITH THE INSTRUCTIONS.

WARNING

No liability is accepted for damage due to:

 
- incorrect use or use other than for its intended purpose
- using the kettle continuously without any water
- repairs carried out by unauthorised persons
- use of non-original spare parts or accessories
- plug-in Vera kettle in a non-earthed socket

Instruction for use

For further information, or in the event of problems that have not been sufficiently addressed in these instructions, contact Customer Care at CASA BUGATTI .

SAVE THESE INSTRUCTIONS CAREFULLY and remember to pass them on to those who will use the kettle after you. If the instructions are lost before you use the kettle, request the instruction booklet from Customer Care at CASA BUGATTI or send an e-mail to diva@casabugatti.it

it or download it from www.casabugatti.it
On the first page of the cover you will find the illustrations relating to the text. Keep the first page open as you read the instructions on use.

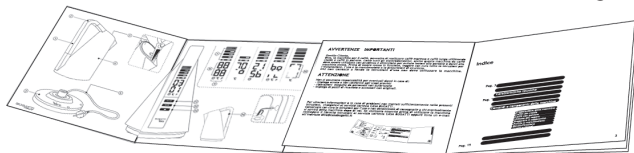

Contents

Pag. 17	Technical features
Pag. “	Description of kettle parts
Pag. “	Kettle Function
Pag. 18-20	Important safeguards
Pag. 21	Installation and starting up
Pag. 21-25	Advice and recommendations on use
Pag. 21-22	Setting up and battery back up
Pag. 23	Heating / Boil water
Pag. 23-24	Temperature setting
Pag. 23-24	Timer setting
Pag. 25	Clock setting
Pag. 25	Special instruction
Pag. 26	Cleaning and maintenance
Pag. 27	Troubleshooting
Pag. 27-28	Warranty

Conversion table °Celsius - °Fahrenheit

°C	°F	°C	°F
45	113,0	73	163,4
46	114,8	74	165,2
47	116,6	75	167,0
48	118,4	76	168,8
49	120,2	77	170,6
50	122,0	78	172,4
51	123,8	79	174,2
52	125,6	80	176,0
53	127,4	81	177,8
54	129,2	82	179,6
55	131,0	83	181,4
56	132,8	84	183,2
57	134,6	85	185,0
58	136,4	86	186,8
59	138,2	87	188,6
60	140,0	88	190,4
61	141,8	89	192,2
62	143,6	90	194,0
63	145,4	91	195,8
64	147,2	92	197,6
65	149,0	93	199,4
66	150,8	94	201,2
67	152,6	95	203,0
68	154,4	96	204,8
69	156,2	97	206,6
70	158,0	98	208,4
71	159,8	99	210,2
72	161,6	100	212,0

TECHNICAL FEATURES

Power supply	See rating plate underneath machine
Power rating	See rating plate underneath machine
Dimensions	220 x 180 x h. 300 mm - 8 1/2 " x 7" x 11 3/4 " approximately
Body	Pressed Solid 18/10 Stainless Steel
Weight	1,7 Kg - 37,5 Pounds approximately
Length of power supply cord	0,75 meter - 30 inches approximately
Thermal overload protection	Built in
Display Battery	Built in: rechargeable
kettle capacity	1,75 litres / 47 fl.oz
Certifications	See rating plate underneath machine
Warranty	As per attached certificate

DESCRIPTION OF THE KETTLE PARTS

Lid	①
Electronic display	②
Stay-cool handle	③
18/10 stainless steel kettle	④
Power base unit	⑤
Connector	⑤a
Plug	⑥
Filter	⑦
Water maximum level mark	⑧

KETTLE ELECTRONIC CONTROLS

Electronic display	②	
Segment indication : "Kettle is heating/boiling"	⑨	
Clock-timer+Temperature Celsius Degree+Program icons	⑩	⑩A Temperature display
Water level display	⑪	⑩B Clock-Timer display
Clock - Temperature - Timer display	⑫	⑩C Heating/Boiling display
"on/off" button	⑬	
"mode" button	⑮	
"▲" Setting button	⑯	
reset button	⑱	

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS CAREFULLY. THE KETTLE MUST BE USED ONLY BY ADULTS WHO HAVE BEEN TRAINED IN ITS USE. SAVE THESE INSTRUCTIONS CAREFULLY.

1. TO PREVENT SERIOUS INJURIES, ELECTRIC SHOCKS AND FIRE TO PEOPLE DO NOT IMMERSE CORDS, PLUGS, POWER BASE OR THE KETTLE ITSELF IN WATER OR OTHER LIQUIDS, EITHER PARTIALLY OR TOTALLY

WARNING: DANGER OF BURNS!

PAY ATTENTION TO HOT SURFACES!

Do not touch hot surfaces. Use only the handle to pick-up the kettle. Use an oven glove when touching hot parts such as body (4), lid (1) and all surfaces of the kettle:

DANGER OF BURNS!

2. The kettle has been designed for **HOUSEHOLD USE ONLY.**

Use kettle only for its intended use. Do not make any technical modifications that might cause risks.

3. Close supervision is necessary when any appliance is used near children.

The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. The kettle must be used only by adults who know how to use it in accordance with these instructions.

4. Never touch live electrical parts. They may cause electric shocks and serious personal injury. Connect the power base unit (5) to a wall socket having the appropriate voltage. The voltage must correspond to the voltage indicated on the rating plate underneath the kettle (4). Make sure that the socket that you are using is earthed (⏚). Do not use the kettle with bare or wet feet.

5. Figure A: power cord with plug. A short power cord with plug is supplied to reduce the risk of becoming entangled in objects, to prevent people for tripping over it and to prevent the cord from wrapping around a longer cord. Long detachable power cords or extension cords are available but they may be used only if a QUALIFIED ELECTRICIAN can confirm that they comply with wiring regulations. DO NOT USE plug/socket adapters. If a long detachable power cord or extension cord is used:

IMPORTANT SAFEGUARDS

- a) The electrical rating of the detachable power cord or extension cord should be at least as great as the electrical rating of the kettle indicated underneath the kettle itself.
- b) The extension cord must be of the 3-wire/pole type and must be earthed. A long cord or extension cord must never protrude from furniture or over counter tops or table tops where it may be pulled on by children or tripped over.
- c) Do not place kettle or cords on or near a hot gas ring or electric hotplate, or in or near the oven.
- d) Do not use outdoors.

Do not let the cords hang over the edge of the table or counter, or touch hot surfaces.

Do not operate the kettle with a damaged cord or plug or after the appliance develops faults, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination or repair. The use of accessory attachments not recommended by the appliances manufacturer may result in fire, electric shock or serious injuries to persons.

e) If the power cable or plugs are damaged, they must be replaced by the manufacturer or with authorized service centre or by a qualified person in order to prevent all risks.

6. Figure B: Make sure that children cannot play with the kettle. Children are not aware of the dangers of electrical appliances.

7. Place the kettle on a flat surface, making sure that the feet adhere firmly to the support surface so that the appliance cannot be overturned. Do not place the kettle on or near hot surfaces or near naked flames.

CAUTION: Do not operate the kettle on an inclined plane.

8. Figure C: Pay attention to hot surfaces. Use handles or knobs or wear oven gloves. Be very careful when touching very hot parts such as lid (1) , body (4) and all surfaces of the kettle.

WARNING! DANGER OF BURNS!

The kettle body (4) and lid (1) become very hot during use.

9. Figure D: To ensure that the kettle works correctly, place it on a flat surface in an adequately lighted and hygienic environment with an easily accessible electrical socket. Keep the kettle at least 10 cm (4 inches) away from the walls.

10. Figure E: Never touch the appliance with wet or damp cloths or hands. Always unplug the kettle when it is not in use and before cleaning. Do not unplug the appliance by pulling on the cord but only holding the plug. Allow kettle to cool before fitting or removing parts, and before cleaning. The kettle must be cleaned with a dry or slightly dampened non-abrasive cloth soaked with a few drops of neutral non-corrosive detergent (never use solvents or alkaline cleaning agents). Clean the outside surfaces of the kettle ONLY.

11. Do not use the kettle under or near flammable material such as curtains, wallpaper, walls and the like.

12. In the event of faults, defects or suspected faults after a fall, unplug the kettle immediately. Never start up a faulty appliance. The repairs must be carried out by the CASA BUGATTI Service Centre. Contact your dealer and/or contact Customer Care at CASA BUGATTI or send an e-mail to diva@casabugatti.it . In the event of fire, use carbon-dioxide (CO₂) extinguishers. Do not use water or powder extinguishers.

13. The kettle is only to be used with the stand provided.

14. Never fill the kettle with water when it is positioned on the power base unit.

15. Never fill the kettle above the «MAX» mark on the control display panel (2). The kettle has a safety system that will not permit it to switch on if the level is over at 1,75 litres (47 fl.oz) . By the way if the kettle is overfilled of water, when boiling water may be ejected.

15a. CAUTION: Do not operate the kettle unless the heating element, placed into the kettle, is fully immersed.

16. Never boil water with the lid open.

19 For conversion table for °Fahrenheit and altitude's temperature difference see the inner cover

IMPORTANT SAFEGUARDS

17. Always ensure that you pour out boiling water slowly and carefully, taking care not to tilt the spout too rapidly.
18. To prevent burns avoid opening the lid when the water is being boiled or just after the kettle has switched off. Be careful when opening the lid, if the kettle is still hot and you wish to refill it with water.

Boiling water can cause burns.

 
 
19. Move the appliance with extreme care when it contains hot water. CAUTION: Do not move the kettle while it is switched on.
20. Only clean the appliance using a damp cloth when it has cooled down.

21. To disconnect verify that the kettle is switched off and remove plug from wall outlet. Always unplug the appliance by holding the plug not the cord.

22. Unplug the power cord from the wall outlet when the kettle is not in use and before cleaning. Allow the kettle to cool before cleaning it.

23. Note: Remove plug from wall outlet when you are not using the kettle. Always unplug the appliance by holding the plug not the cord.

24. CAUTION: To prevent damages to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

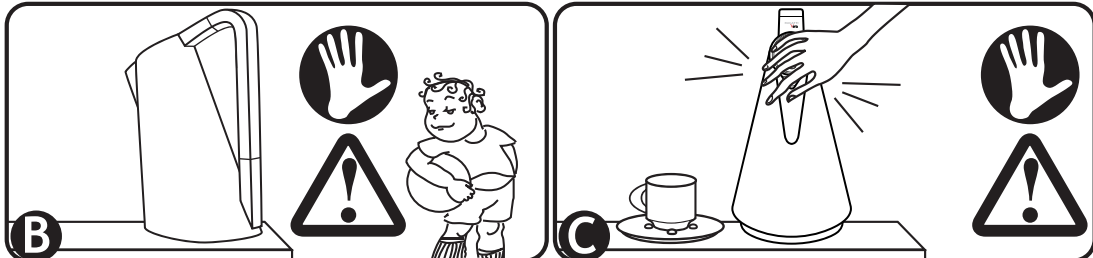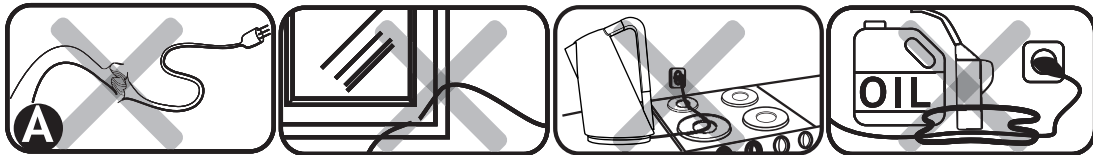

Installation and starting up

The original packaging has been designed for dispatch by post. Keep it in case you need to return the kettle to the supplier. Before installing the kettle, comply with all the points of the safety instructions on the previous pages. After removing the kettle from its packaging, make sure that it is in perfect condition and make sure that no kind of matter, packaging material, warranty sheets or the like have accidentally fallen inside the kettle during transport or when opening the packaging.

The plastic bag in which the kettle is packaged should be kept out of reach of children as it poses a suffocation hazard.

In order to remove dust that may have accumulated on the kettle, simply dust it off with a dry soft cloth. After you have carried out the above steps and have strictly followed the safety standards, proceed to connect to the power supply.

Connecting to power supply: electric current can kill! Follow safety instructions !

Plug the power cord (6) of the Vera kettle into a power socket, the voltage of which corresponds to the voltage indicated on the rating plate underneath the kettle.

To disconnect, make sure that the kettle is not running and if it is running press the on/off button (14) to stop all the heating operation. Do not unplug the kettle from the power point by pulling on the cord. Always unplug the appliance by holding the plug (6). The Vera kettle will show that it is connected to the power when the display is on. To switch off completely the kettle plug (6) has to be removed from the socket.

Make sure that the electric socket that you are using is suitably earthed. Never use faulty or damaged power cords. Use an extension cord only after making sure that it is in perfect condition (adhere strictly to the safety instructions specified in point 5).

Never allow parts carrying live voltage to come into contact with water: it may cause a short circuit!!! (follow all the safety instructions specified above).

Advice and recommendations on use

Setting up the kettle and battery back up

1) the Vera Kettle is an electronic kettle and all functions are controlled by the Controls on the handle.

The functions selected are shown on the Display Panel on the handle (3) .

a) The display shows the water level,

b) Use the controls to set the temperature of the water needed

c) Use the controls to set the timer. You can heat water to be ready at a pre-set time

 
 
 
d) The display panel has a clock

2) Follow all safety and operating instructions specified in this manual.

3) Place the power base unit (5) and kettle (4) on a stable flat surface which is not hot and do not place near a heat source. The surface must be dry. Keep the appliance and its cord out of reach of children. During use, do not place the base unit on a metal tray or a metal surface.

4) Vera kettle is fitted with a back up battery to remember your settings. Before operating the kettle, please fully charge the battery for 12 hours.




After 12 hours charge we suggest to reset the panel by pressing the reset buttons on the back of the handle following the steps shown into the “SPECIAL INSTRUCTION” paragraph at point C). When take off the kettle from the power base, the kettle will activate all functions, and it also shows the water level, setting the timer and temperature in this mode.

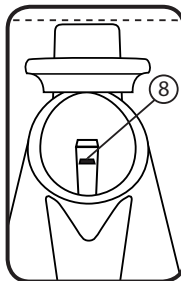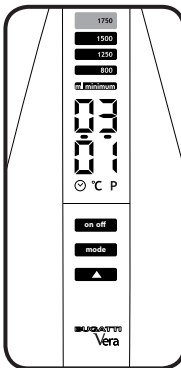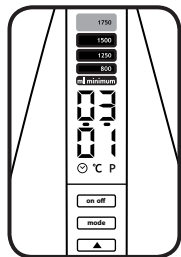

5) When the plug (6) of the power base unit (5) is inserted into the socket Vera Display will illuminate. The display indicates the clock and the water level “ml minimum” will flash to inform the user that the kettle is empty/at the minimum level (under 800ml): the kettle needs to be filled by water.

6) Filling the kettle:

   - a) remove the kettle body from the power base unit. Hold it by the handle (3)
- b) open the lid (1) : press on the rubber “point” (picture “a”) on the lid (1) and press down firmly (picture “b”). Then release (picture “c”) and the lid will open automatically. The lid is not removable and the max opening is shown in the picture “d”.

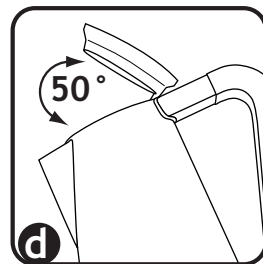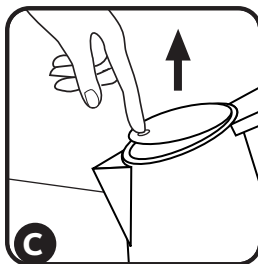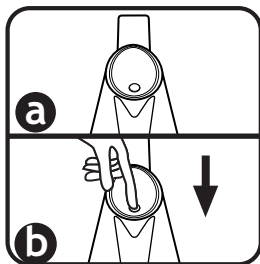

c) fill the kettle with water directly under the tap or fill it by pouring water from a bottle, jug or jar to the needed level (attention the minimum level that allow the kettle to operate is “800 ml”). Do not add water past the maximum fill level. On the display (2) in the water level sector (11), the water level is shown by the level lights. The blue levels are: ml mimimum (between 0 and 800ml), 800ml (about 22 oz), 1250ml (about 35 oz), 1500ml (about 40 oz) and the red level is 1750ml (about 47oz). While the kettle is being filled with water the lights will illuminate one after the other as each level is reached.

 
If the water inside the kettle is over 1750ml (about 47oz) and less than 1950ml (about 54oz) only the top red light level is illuminate. If the water level is over 1950ml (about 54oz) the top red light level starts to flash showing that the kettle is over filled and the kettle will not operate.

If the water level is under then 800ml (about 22oz) the blue “ml minimum” light level will be blink showing that the kettle is nearly empty. In this case, for safety reason and heating element protection, the kettle will not operate because the water level is too low : check and eventually fill the kettle with water till, on the display, the blue light of the level “ml minimum” stop to blink and the blue light of the level “800ml” is on. Only in this way the kettle can start to operate.

In case the battery is not charged or does not work the water level sectors (11) are not shown on the display (2). ATTENTION: to avoid to overflow of water the kettle, make sure that never the water level is over the mark (8) inside the kettle. CAUTION: Do not move the kettle while is switched on.

Advice and recommendations on use

Heating / Boiling function

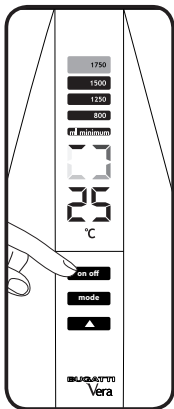


- Place the kettle on the power base unit (5) and press the “on/off” button (14). When the kettle starts boiling/heating, the temperature symbol mark “°C” (Celsius Degrees) is on and the number grow up showing on the display the average temperature of the water inside the kettle.
- When the kettle is heating the segments (9) on the display (2) runs clockwise; this indicates that the kettle is working and is ON.
- When the water temperature reaches 100 °C the kettle switches off automatically and the “boil” word(10C) flash on the display(2) for about 10 seconds then the display change to show the current average water temperature “°C” inside the kettle.
- At any time, the function boiling water can be stopped by pressing the On/Off button (14). **ATTENTION:** If the button on/off is pressed two times consecutively after the boil function, the kettle will restart again to boil only after the display shows the temperature of 96° C

e) **POURING OUT WATER:** Remove the kettle from the power base unit (5), holding it by its handle (3). Ensure that the kettle body remains level while lifting it from the power base unit (5).-Pour the water from the spout with the lid (1) closed. **ATTENTION :** boiling water can cause scalds. Always ensure that you pour out boiling water slowly and carefully, **taking care not to tilt the spout too rapidly.**

f) To turn the display to the clock (10B) or temperature (10A) display press the setting button “▲” (16) one time. This operation can be done when the Vera kettle is not heating/boiling.

g) The water temperature shown on the display correspond to an average temperature of the water inside the kettle.

 
Temperature and timer setting functions

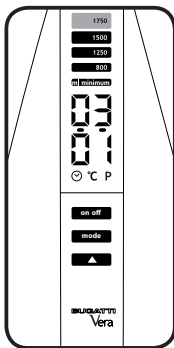

Vera kettle can heat the water to the temperature required (between 45°C and 98°C - Tolerance $\pm 3^\circ\text{C}$). Vera kettle can switch on at the desired time, too. Just follow these simple instructions:

- Press the “mode” button (15) for 1 second to enter the temperature setting function, and then you will see the blue “°C” icon turn on and the red “P” icon starts flashing.
 - Press the button “▲” (16) to set the temperature. The temperature setting cannot be set higher than 98°C and cannot be set lower than 45°C. One click corresponds to 1°C. If the “▲” setting button (16) is pressed continuously the temperature number rises until the required temperature has been reached. When 98°C is reached and the “▲” setting button (16) is still pressed the temperature numbers start again from 45°C.
- If you need to set only the temperature you can go to the instruction g) of this paragraph. If you need to set the timer, please, continue with the instruction c) of this paragraph.

 - c) After setting the temperature, press the “mode” button(15) one time again to set the timer function, and then you will see the blue “ °C ” icon turn off and hour icon “⌚” will turn and the hours numbers will start flashing.
- d) Press the setting button “▲”(16) to set the hour. One click corresponds to one hour and if the setting button “▲” (16) is kept pressed the number rises continuously until the required time is reached.
- e) To set the minutes press the “mode” button (15) one time again and minute numbers being flashing.
- f) Press the setting button “▲” to set the minutes. One click corresponds to one minute and if the setting button “▲” (16) is kept pressed the number rises continuously until the required time is reached.
- g) After setting the temperature or temperature and time, you have to press the “mode” button (15) for 4 seconds to confirm the setting. Red ”P” and blue “⌚” icons turn on, and the display will change to show the current time (clock).

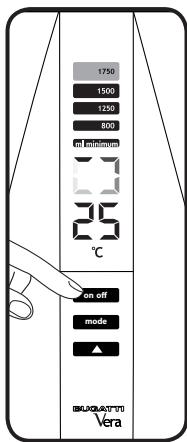

h) The kettle waits for the heat/boil setting time. When Vera achieves the set time it starts to heat/boil at the set temperature and the red “P” icon will be off (see the point o) at the end of this paragraph).

i) If only the setting of the temperature is required, press the on/off button (14) the Vera kettle begins to heat/boil the water at the set temperature. When Vera starts to heat/boil at the set temperature the red “P” icon will be off (see the point “o” at the end of this paragraph)

l) when the kettle is heating the segments (9) on the display runs clockwise. It indicates that the kettle is working and it is ON.

m) To cancel/reset the setting program (boil/heat temperature and timer), press the setting button “▲” for 3 seconds. The red “P” icon will be off. Then by pressing the “on/off” button Vera kettle starts to boil the water (see the BOILING FUNCTION).

n) To turn the display on clock (10B) or temperature(10A) press one time the setting button “▲” (16) This operation can be done when the Vera kettle is not heating or boiling.

o) ATTENTION:

The timer-temperature function is not a permanent function.

For safety reasons the setting timer-temperature function has to be set each time the kettle is used.

The water temperature shown on the display correspond to an average temperature of the water inside the kettle (Tolerance $\pm 3^{\circ}\text{C}$)

Advice and recommendations on use

Clock setting

The Clock setting (24 hours) can be set when Vera does not heat or boil water.

Place Vera on the power base unit (5) and set the time very easily by following these simple steps:

- Press the “mode” button (15) for 3 Seconds, until the “☺” icon and hour numbers on the display start flashing.
- Press the setting button “▲” (16) to set the hour. One click corresponds to one hour and if the setting button “▲” (16) is kept pressed the number rises continuously until the required time is reached.
- To set the minutes press the “mode” button (15) one time again and minute numbers start flashing.
- Press the setting button “▲” to set the minutes. One click corresponds to one minute and if the setting button “▲” (16) is kept pressed the number rises continuously until the required time is reached.
- After setting the minute, press “mode” button (15) for 3 Seconds to finish the setting.
- To turn the display on clock(10B) or temperature(10A) press one time the setting button “▲” (16) This operation can be done when the Vera kettle is not heating or boiling.

Special instruction

A) Safety cut-off

 
Vera is protected against damage resulting from use with an insufficient volume of water. In case user press the button on/off (14) and on the kettle display the blue light “ml minimum” blink, the kettle will not operate and eventually fill the kettle with water till, on the display, the blue light of the level “ml minimum” stop to blink and the blue light of the level “800ml” is on. Only in this way the kettle can start to operate.

In case user press the button on/off (14) and the kettle is empty or nearly empty and for wrong water level signal the kettle start to heat, a safety cut-off will automatically disconnect the power supply if the heating element over heats. Should the kettle ever boil dry during operation, you must leave it to cool for 10 minutes before refilling it with cold water. Pull up the kettle from the power base, after cooling down. The safety cut-off will reset automatically once the kettle has cooled.

B) Before using Vera kettle

Clean the inside of Vera kettle before using it for the first time by filling it completely (to the MAX level) with water, boiling the water following the BOILING FUNCTION and then discarding the water. Repeat this operation two times and any time that the kettle has not been used for long time.

C) Display reset

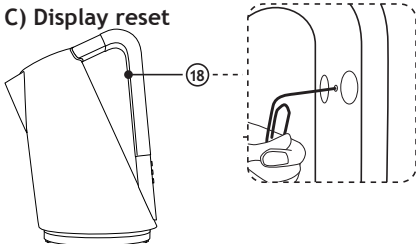

If the display is not showing correctly the functions need to be reset. This is for safety to refresh all MCU memory inside. Place the Vera kettle on the power base unit (5). Plug it in. Press the reset button (18) by using a part of a metal clip or by toothpick for 5 seconds. The display will be back to the original settings and all pre set settings (clock, timer and temperature) will be lost.

Cleaning and maintenance

CAUTION: Always disconnect the kettle from the electrical outlet before cleaning.

Before cleaning, be sure the kettle is cold.

Clean the exterior surface of the kettle with a clean, damp cloth to preserve its original highly polished finish. Dry and polish with a soft cloth.

 
Do not use abrasive cleansers or scouring agents of any kind on the interior or exterior of the kettle.

Do not immerse the kettle or power base in water or other liquid, and be sure that the electric kettle plug (6) and connector (5a) of the power base (5) is kept dry.

a) Filter (7)

Scale, or calcium, is a natural substance that forms when hard water is boiled. The filter serves to retain the calcium in the water kettle. It is important to clean the filter regularly. The filter clips into the spout and can be removed by pulling it up from the spout. It can be cleaned by gently brushing with a soft brush under running water.

ATTENTION: This operation can be performed only when the kettle is not working and when the kettle has cooled down. **DO NOT REMOVE THE FILTER WHEN VERA KETTLE IS WORKING AND WHEN THE SURFACE IS HOT. BOILED WATER AND STEAM CAN BURN!!!**

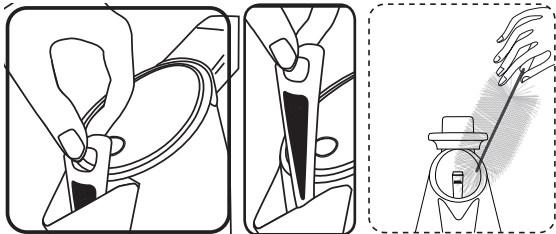

b) Decalcification

Decalcification refers to removing the calcium deposits which may form in the interior metal parts of the kettle. To get the best performance from your Vera kettle, decalcify your unit from time to time. Frequency depends on the hardness of your tap water and how often you use the kettle.

We suggest to do it every 200-300 boil cycles or every month. We suggest use of a kettle descaler in

order to dissolve these chalky deposits or lime build up. Follow the directions on the descaler package. By the way CASA BUGATTI suggests the following natural way. If a commercial descaler is not available, fill the kettle with enough white vinegar to cover by 2 cm the bottom. Use a soft brush together with vinegar to clean the plastic water level sensor holder in order to remove the chalky deposit. Bring the vinegar to a boil. You may need to repeat this several times with cooled vinegar to remove the calcium build up completely. When the descaling process is complete, empty the kettle and rinse out several times with clean water.

c) Battery

The battery can be removed and replaced by user because it is placed inside the handle (3). The battery life is over 2 years. After that period the battery still has 70% capacity. When the display (2) cannot stay ON, while the kettle (4) is removed from the power base (5), means that the battery has reached its minimum level capacity.

Contact an authorised Bugatti Customer Service Center in order to change the battery : the service center will send you the battery pack and its replacement instruction. Attention : remember that the batteries are consumable parts and they are out of warranty.

Troubleshooting

If the Vera kettle develops faults or defects or if irregularities are suspected, unplug it immediately. If you cannot eliminate the fault by following the instructions in this manual, contact Customer Care at CASA BUGATTI. Repairs carried out incorrectly expose the user to grave danger. No liability is accepted for damage or injury caused by repairs carried out incorrectly and in such cases warranty rights are voided.

Trouble	Possible Cause	Solution
The display on handle does't switch on	The kettle is not well positioned on the power base (5) and the plug (6) is not well insert in the socket . The rechargeable battery is still not correctly charged.	“Check if the plug (6) of the power base (5) is well connected to the wall socket. Check that there is electricity in your system. Remeber, before operating the kettle, please fully charge the battery for 12 hours.”
Il display does not show proper information	The kettle does not work for long time	Make the RESET function for the display as per Special instruction of this manual
The watel level light are on without water inside the kettle.	There is lime scale on the water level sensors	Make the RESET function for the display as per Special instruction of this manual and if the problem does not leave make the descaling as per point b) of the Cleaning and maintenance chapter.
The kettle does not work properly or stops before boiling.	There is lime scale into the kettle	Make the descaling as per point b) of the Cleaning and maintenance chapter.
If the water tastes bad.	Water is in the kettle for more then 12 hours - The kettle is not well washed after the descaling cycle	We suggest to change the residual water after each boiling cycles. Rinse the kettle sufficient time in order to remove completely the descaling product
The kettle, after pressing the button on/off(14) does not start to heat.	The water level inside the kettle is lower than “800ml” and the blue light “ml minimum”, on the display on handle, blinks.	Fill the kettle with water till, on the display, the blue light of the level “ml minimum” stop to blink and the blue light of the level “800ml” is on.
The water inside the kettle, during the heating, comes to the boil but the temperature shown on the display on the handle is lower than 99°C.	The kettle is used at an altitude over 500/1000 meter on the sea level	Have a look to the third cover page instruction: ALTITUDE WATER BOILING TEMPERATURE during the BOIL FUNCTION.

WARRANTY

- 1) A warranty is deemed to be the replacement or repair free of charge of the parts making up the kettle that were faulty at the time of purchase due to manufacturing faults.
- 2) In the case of irreparable or repeated faults which are due to manufacturing faults as above, at the manufacturer's sole discretion, the machine will be replaced.
- 3) The warranty does not cover damage due to:
 - a) incorrect or faulty use
 - b) defects caused by accidental breakages or carelessness
 - c) failure to follow instructions and warnings, incorrect installation, cleaning and maintenance
 - d) maintenance and/or modifications performed by unauthorised personnel
 - e) use of non-original spare parts
 - f) carriage
 - g) using any kettle function without water continuously
 - h) any other circumstance that cannot be ascribed to manufacturing faults. Any claims not envisaged by law are excluded.
- 4) The warranty does not cover damage due to improper use and in particular due to non-domestic use.
- 5) The manufacturer accepts no liability for any direct or indirect harm or injury to persons, things and domestic animals that may arise from failure to abide by all the safety instructions contained in this manual, especially failure to abide by the instructions on installation, use and maintenance of the kettle.
- 6) Replacement or repair shall not extend the warranty period. The warranty does not cover the replacement of consumables, such as the resistances, battery, etc.
- 7) The warranty runs from the date of receipt of evidence of purchase and of receipt of the warranty card by CASA BUGATTI.

SERVICE CENTRE

In the event of a kettle fault, contact an authorised BUGATTI dealer, who will return the kettle to the manufacturer.

The purchaser is responsible for all carriage and/or dispatch costs for all repairs covered or not covered by warranty. If possible, keep the kettle's original packing for dispatch.

Important: If the nonconforming product is to be serviced by someone other than contact an authorised BUGATTI dealer, please remind the service to call our Consumer Service Center to ensure that the problem is properly diagnosed, the product serviced with the correct parts, and to ensure that the product is still under warranty.



DISPOSAL OF THE PRODUCT IN CONFORMITY TO EUROPEAN DIRECTIVE 2002/96/EC.

At the end of its working life the product must not be disposed of alongside urban waste. It can be delivered to local-authority separated waste collection centres or to dealers who provide this service. Separated disposal of a household appliance enables possible negative consequences for the environment and health arising from improper disposal to be eliminated and enables the materials of which it is made to be recovered in order to make significant power and resource savings. The symbol of a moveable waste bin marked with a cross displayed on the product indicates that as a household appliance it must be disposed of separately.

(DE) Alle Details des Textes wurden gewissenhaft geprüft. Das Unternehmen behält sich das Recht vor, Klarstellungen bereit zu stellen, falls im Text Druckfehler oder irreführender Informationen auftreten.

Achtung: Das Unternehmen aktualisiert die Produktdetails in diesem Handbuch fortlaufend, einschließlich der Überarbeitung der technischen Daten, behält sich jedoch das Recht vor, Änderungen ohne vorherige Ankündigung vorzunehmen. Das Aussehen, die Form und Farbe des Produktes basieren auf dem realen Standardprodukt.

(ES) Todos los detalles del texto han sido revisados cuidadosamente. Nuestra compañía se reserva el derecho de proveer aclaraciones en el caso de que el texto contenga errores tipográficos o informaciones erróneas.

Cuidado: Nuestra compañía se encarga de la actualización de todos los detalles del producto mostrados en el manual, incluyendo las especificaciones técnicas. No obstante se reserva la facultad de revisar el manual sin aviso previo. La perspectiva, la forma y el color del producto se inspiran al producto real estándar.

(PT) Todos os detalhes do texto foram devidamente verificados. A nossa empresa reserva-se o direito de fornecer qualquer outro esclarecimento no caso em que o texto apresente gralhas ou informações pouco claras.

Atenção, A nossa Empresa mantém atualizados os detalhes do produto constantes no manual de instruções, incluindo as revisões das características técnicas; reserva-se a facultade de efetuar modificações sem pré-aviso. A prospectiva, a forma e a cor do produto foram inspiradas no produto real padrão.

(NL) Alle details van deze tekst zijn zorgvuldig gecontroleerd. Het bedrijf behoudt zich het recht voor om toelichting te bieden m.b.t. de tekst in het geval van drukfouten of misleidende informatie.

Opmerking: Het bedrijf werkt de details van het product in deze handleiding bij, met inbegrip van de herziening van de technische specificaties en behoudt zich het recht voor om wijzigingen aan te brengen zonder waarschuwing vooraf. Het voorkomen, de vorm en de kleur van het product zijn gebaseerd op het huidige product.

(RU) Вся информация, изложенная в данном тексте, была тщательно проверена. Компания оставляет за собой право на предоставление любых пояснений, если в тексте имеются опечатки или же вводящая в заблуждение информация. **Внимание:** Компания обновляет информацию об изделии, содержащуюся в инструкции, включая пересмотр технических характеристик. Тем не менее, она оставляет за собой право на внесение изменений без предварительного уведомления. Вид, форма и цвет изделия похожи на его реальный, стандартный вариант.

(CS) Všechny detaily obsažené v textu byly pečlivě zkontrolovány. Firma si vyhradzuje právo poskytnout veškerá ujasnění v případě tiskových chyb nebo zavádějících informací. **Pozor:** Firma aktualizuje detaily týkající se výrobku obsažené v tomto návodu k používání, včetně revizí technických specifikací. Nicméně si vyhradzuje právo na provedení změn bez předchozího upozornění. Perspektiva, tvar a barva výrobku jsou inspirovány standardním skutečným výrobkem.

(RO) Toate detaliile textului au fost atent verificate. Fabrica isi rezerva dreptul de a furniza orice clarificari in cazul in care exista in text erori de imprimare sau informatii care induc in eroare. **Atentie:** Fabrica actualizeaza detaliile despre produs prezente in manualul de instructiuni, inclusiv revizuirea specificatiilor tehnice. Cu toate acestea, isi rezerva dreptul de a aduce modificari fara aviz in prealabil. In perspectiva, forma si culoarea produsului se inspira din produsul standard real.

(FI) Koko teksti on tarkistettu yksityiskohtaisesti. Yritys pidättää itselleen oikeuden antaa lisäselvityksiä, jos tekstissä on painovirheitä tai harhaanjohtavia tietoja. Huomio: Yritys pitää käyttöohjeessa olevat tuotetiedot (myös teknisten tietojen korjaukset) päivitettyinä. Se pidättää itselleen kuitenkin oikeuden tehdä muutoksia ilman ennakoilmoitusta. Näytetyt ulkonäkö, muoto ja väri vastaavat todellista vakiotuotetta.

(GR) Όλες οι πληροφορίες του κειμένου έχουν ελεγχθεί προσεκτικά. Η εταιρεία μας διατηρεί το δικαίωμα να παρέχει τυχόν διευκρινίσεις σε περίπτωση ύπαρξης τυπογραφικών λαθών ή παραπλανητικών πληροφοριών. Προσοχή: η εταιρεία ενημερώνει τακτικά τα στοιχεία του προϊόντος που περιλαμβάνονται στο εγχειρίδιο χρήσης, συμπεριλαμβανομένων και των τεχνικών προδιαγραφών. Επιφυλάσσεται επίσης του δικαιώματος να επιφέρει τροποποιήσεις χωρίς ουδεμία προειδοποίηση. Η εμφάνιση, το σχήμα και το χρώμα του προϊόντος βασίζονται σε τυπικά χαρακτηριστικά πραγματικών προϊόντων.

(DA) Samtlige specifikationer i teksten er blevet nøje kontrolleret. Virksomheden forbeholder sig ret til at meddele en hvilken som helst præcisering i tilfælde af trykfejl eller vildledende oplysninger i teksten. Advarsel: Virksomheden holder produktspecifikationerne i brugsanvisningen opdateret, inkl. ændringer i de tekniske specifikationer. Virksomheden forbeholder sig imidlertid ret til at udføre ændringer uden forudgående varsel. Produktets udseende, form og farve følger det reelle standardprodukt.

(PL) Wszystkie szczegóły podane w tekście starannie sprawdzono. Producent zastrzega sobie prawo do udzielenia wszelkich wyjaśnień w przypadku pojawienia się błędów drukarskich lub przekazania mylnych informacji. Uwaga: Producent aktualizuje zawarte w instrukcji obsługi szczegółowe dane na temat produktu oraz dokonuje aktualizacji specyfikacji technicznej. Zastrzega sobie jednak prawo do wprowadzania zmian bez wcześniejszego o tym poinformowania. Widok perspektywiczny, kształt oraz kolor produktu opierają się na standardowym produkcie rzeczywistym.

(TR) Metnin tüm detayı dikkatli bir şekilde kontrol edildi. Herhangi bir basım hatası veya yanlış bilgilendirme durumunda firmamız metnin detaylı bir şekilde anlatma hakkına sahiptir. Not: Teknik detayları dahil olmak üzere, firmamız talimatlarında gösterildiği gibi her ürünü güncel şekilde tutmaktadır. Ön ihtar olmadan talimat kitapçığını düzenleme hakkına sahibiz. Tüm ürünlerin dış görünümü, şekli ve rengi ürünlerin fiziksel haline göre dir.

TEMPERATURA DI EBOLLIZIONE IN ALTITUDINE durante la fase di BOLLITURA

La temperatura di ebollizione dell'acqua varia a seconda dell'altitudine rispetto al livello del mare come da tabella sotto riportata. In altitudine l'acqua bolle ad una temperatura inferiore ai 100°C (212,0 °F) per la differenza di pressione. E' importante conoscere che il bollitore mostra sul display la temperatura media dell'acqua presente nel bollitore.

ALTITUDE WATER BOILING TEMPERATURE during the BOIL FUNCTION

The boiling temperature of water varies according to the altitude than at sea level as the below list. In altitude the water boils at a lower temperature than 100°C (212,0 °F) due to the pressure difference. It is important you know that the display of the kettle shows the average boil temperature of the water into the kettle.

TEMPERATURE EN ALTITUDE PENDANT LA PHASE D'EBULLITION

La température d'ébullition de l'eau varie selon l'altitude par rapport au niveau de la mer, comme démontré sur le diagramme ci-dessous. En altitude l'eau bout à une température inférieure à 100°C (212,0 °F) pour causes de différence de pression. Il est important de savoir que la bouilloire indique sur l'affichage la température moyenne de l'eau à l'intérieur de la bouilloire.

TEMPERATURA DE EBULLICIÓN EN ALTITUD durante la fase de HERVIDO

La temperatura de ebullición del agua varía según la altitud respecto al nivel del mar como detallado en la tabla de más abajo. En altitud el agua hierve a una temperatura inferior a los 100°C (212,0° F) por la diferencia de presión. Es importante saber que el hervidor muestra en la pantalla la temperatura media del agua presente en el hervidor.

SIEDETEMPERATUR DES WASSERS IN DER HÖHE beim kochen FUNCTION

Die Siedetemperatur des Wassers variiert nach der Höhe wie in die nachstehende Tabelle. In Höhe der Wasser siedet bei einer niedrigeren Temperatur als 100 ° C (212,0 ° F) aufgrund der Druckdifferenz. Es ist wichtig, dass Sie wissen, dass über das Display die durchschnittlich Temperatur des Wasserkocher gezeigt ist.

Altitudine Metri Altitude Meter	~ °C	~ °F	Altitudine Piedi Altitude feet
0	100	212,00	0
500 ÷ 1.500	95 ÷ 98	208,40 ÷ 203,00	1.640 ÷ 4.921
1.500 ÷ 2.500	95 ÷ 91	203,00 ÷ 195,80	4.921 ÷ 8.202
2.500 ÷ 4.000	91 ÷ 85	195,80 ÷ 185,00	8.202 ÷ 13.123

* Questi dati sono solo per riferimento

* These dates are only for reference

* Ces données sont seulement une référence indicative

* Estos datos son sólo de referencia

* Nur als Referenz daten

Conversion table °Celsius - °Fahrenheit

°C	°F	°C	°F
45	113,0	73	163,4
46	114,8	74	165,2
47	116,6	75	167,0
48	118,4	76	168,8
49	120,2	77	170,6
50	122,0	78	172,4
51	123,8	79	174,2
52	125,6	80	176,0
53	127,4	81	177,8
54	129,2	82	179,6
55	131,0	83	181,4
56	132,8	84	183,2
57	134,6	85	185,0
58	136,4	86	186,8
59	138,2	87	188,6
60	140,0	88	190,4
61	141,8	89	192,2
62	143,6	90	194,0
63	145,4	91	195,8
64	147,2	92	197,6
65	149,0	93	199,4
66	150,8	94	201,2
67	152,6	95	203,0
68	154,4	96	204,8
69	156,2	97	206,6
70	158,0	98	208,4
71	159,8	99	210,2
72	161,6	100	212,0

(IT) Tutti i dettagli del testo sono stati attentamente controllati. L'azienda si riserva il diritto di fornire qualsiasi chiarimento in caso nel testo ci siano errori di stampa o informazioni fuorvianti.

Attenzione: L'azienda mantiene aggiornati i dettagli di prodotto presenti nel manuale istruzioni, incluse le revisioni delle specifiche tecniche; si riserva comunque la facoltà di apportare modifiche senza preavviso. La prospettiva, la forma e il colore del prodotto si ispirano al prodotto reale standard.

(EN) All the details of the text have been carefully checked. Our company reserves the full right to explain the elaboration of the text if there is any printing error or misleading information.

Note: Please be reminded that our company keeps updated every product detail shown on the instruction book, including technical specification. We reserve to revise the instruction book without prior notice. All product's outlook, shape and color are based on the standard of actual physical products.

(FR) Tous les détails du texte ont été contrôlés attentivement. Notre entreprise se réserve le droit de fournir tous les éclaircissements qui s'imposeront au cas où le texte contiendrait des erreurs d'impression ou des informations trompeuses.

Attention : Nous continuerons de mettre à jour les détails de produit présents dans le manuel d'instructions, compris les révisions des spécifications techniques. Nous nous réservons toutefois la faculté d'apporter des modifications sans préavis. La perspective, la forme et la couleur du produit s'inspirent du produit standard réel.

(ZH)

特别声明

本资料上所有内容均经过认真核对，如有任何印刷错误或内容上的误解，本公司保留解释权。

另：产品若有技术改进，会编入新版说明书中，恕不另行通知；产品外观、颜色如有改动，以实物为准。

"See on the internal pages: (DE), (ES), (PT), (NL), (RU), (CS), (RO), (FI), (GR), (DA), (PL), (TR)"

Ilcar di Bugatti S.r.l.
via Industriale, 69
25065 Lumezzane (BS)-Italia
tel.+39.030.89.280
fax +39.030.89.28.250
www.casabugatti.com
diva@casabugatti.it



ATTENZIONE/ATTENTION

Dati cliente/final customer address

Nome/name

Indirizzo/address

Cap/zip

Città/city

Stato/country

e-mail

Autorizzazione ai sensi della legge 675/96
sulla tutela dei dati personali / Consent
to use your personal data information complying
with privacy law 675/96.

Firma

BUGATTI®



BUGATTI[®]

**GARANZIA
WARRANTY
GARANTIE
GARANTÍA
GARANTIA**

Послепродажное обслуживание

**ZÁRUKA
TAKUU**

Εγγύηση 2 Ετών
GARANTI

Послепродажное обслуживание

الضمان

**Timbro/Nome/Indirizzo rivenditore
Retailer stamp/name and address**

**Numero documento fiscale e data acquisto:
Number and/or date of receipt of payment:**

etichetta matricola